

## Harry - LED Headphones

Flash Harry is a headphone that likes to go one better at every opportunity. Lush loud sound, ultra comfort design and stunning bright LED lights that flash to the beat of your channel.

Harry works with up to 4 channels of audio, be that DJ, iPod or DVD player.

Harry is also environmentally conscious with an internal rechargeable battery that lasts over 12 hours.



## Technical Specifications

Model Number: OE300F

Dimensions: 13cm x 12cm x 8cm

Weight: 260 grams

Speaker: 40mm mylar

Sound: Stereo, 30-12Khz, 70db

Frequency Response: 20~15,000Hz

Channel separation: >40dB

Modulation: FM

Impedance: 32 ohm

S/N Ratio: ≥75dB

Power Source: 2x AAA Battery

Battery Life: Up to 20 Hours

Connections: UHF/RF & Aux/3.5mm Jack

Buttons: Power/Scan & Volume

Other: Folding

## Product Features

### Smart Selection

Bob supports multiple channels of audio, Smart Selection allows Bob to detect and only allow selection between those channels actively broadcasting, meaning no dead channels no matter how many or how few channels are set up.

### Power Saving Mode

Bob headphones will automatically switch off after 10minutes of not receiving any broadcasted channel. This saves battery and time at the end of an event.

### Active Noise Reduction

Bob Headphones have internal systems to reduce background noise from audio and transmission to give you crystal clean sound

### Phase-Lock Loop Technology

Phase-Lock Loop technology prevents signal loss over longer distances or in unusual environments

### Folding

Bob folds aware securely to minimise space and protect itself in transit. 60 Bobs can fit in a Doug box securely .

### Auxiliary Socket

When turned off, the auxiliary socket is taken as an audio input, allowing Bob to be used as a standard pair of headphones. When turned on, the auxiliary socket will output the currently selected channel.

### Cross Compatible

Bob is cross compatible with any and all Over-Ear wireless products - mix and match receivers and transmitters at any event.

## Instructions

### A - Turning on and Switching Channel

Turn on/off the headphone by holding down the power button until the Channel Indicator light turns on. Switch channel by quickly tapping the power button.

### B - Channel Indicator

The Channel Indicator will change colour depending on which channel is selected.

#### EU Frequencies:

Red = A = 863.1Mhz

Green = B = 863.7Mhz

Blue = C = 864.9Mhz

Yellow = D = 864.3Mhz

#### US Frequencies:

Red = A = 914Mhz

Green = B = 915Mhz

Blue = C = 916Mhz

Yellow = D = 917Mhz

### C- Volume

Scroll the volume slider to increase of decrease the volume.

### Troubleshooting

If having issues with the headphones, follows these steps

1. Check volume is up
2. Press the power button to find a channel
3. Make sure you are in range of the transmitter
4. Turn headphones on and off
5. Check if other headphones are having the same issues, if so check for issues with the transmitter or audio source.